




Check your local regulations before using this device.

It lures, catches & holds automatically!

automatic fishing reel

INSTRUCTIONS IN USE OF AUTOMATIC FISHING REEL

 1. Attach hook to swivel and if in swift water add sinker to line.
2. Fasten line at top of reel to a suitable object such as a stick, limb, tree, dock, boat, etc.
3. Adjust desired tension of reel by winding line on reel clockwise for strong tension and unwinding line off reel for slack tension as desired, until hook is 2 to 6 inches above the water, as shown above.
4. Bait hook with minnows, worms, cricket, etc.
5. Place reel in palm of hand and pull down on line to the desired depth and press down on the back arm of the trigger and ease back on line until trigger arm engages in slot on reel. A slight pull on the line will trip the trigger and reel in the fish.
6. Add drop of oil occasionally to trigger pin.
7. If reel binds, insert flat object under arbor and twist slightly to increase clearance, as shown below.

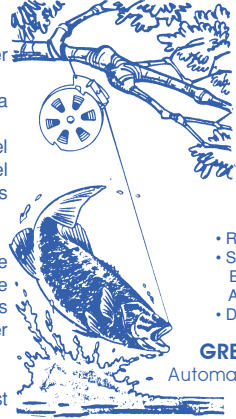

CLOTHES LINE WHILE CAMPING

OTHER USES:

- Retractable Small Pet Leash
- Suspension device for:
 - Electrical cords
 - Air hoses
- Door or gate closer.

GREAT FOR SURVIVAL KITS!

Automatic Fishing Reel Has Many Uses.


MANUFACTURED BY MECHANICAL FISHER

Golden Scout Industrial
101 North Tower Ave
Ash Grove, MO 65604
www.yoyoreel.com


MADE IN U.S.A.

SHIPPING WEIGHT:
1 lb. 12 oz. per doz.

FISHING IN VARIOUS WAYS

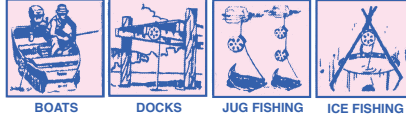


MECHANICAL FISHER'S Yo Yo Fishing Reel

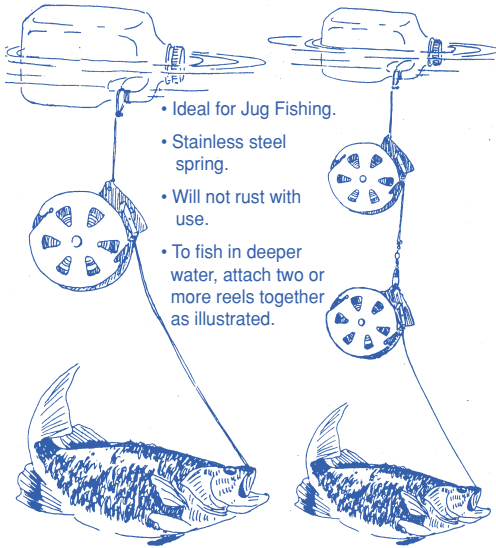

- Ideal for Jug Fishing.
- Stainless steel spring.
- Will not rust with use.
- To fish in deeper water, attach two or more reels together as illustrated.

MADE IN U.S.A.

Automatic Decoy Line Retriever

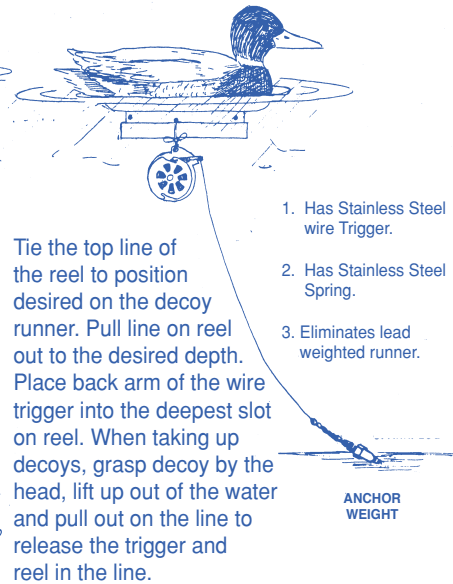

1. Has Stainless Steel wire Trigger.
2. Has Stainless Steel Spring.
3. Eliminates lead weighted runner.

Tie the top line of the reel to position desired on the decoy runner. Pull line on reel out to the desired depth. Place back arm of the wire trigger into the deepest slot on reel. When taking up decoys, grasp decoy by the head, lift up out of the water and pull out on the line to release the trigger and reel in the line.

ANCHOR WEIGHT